

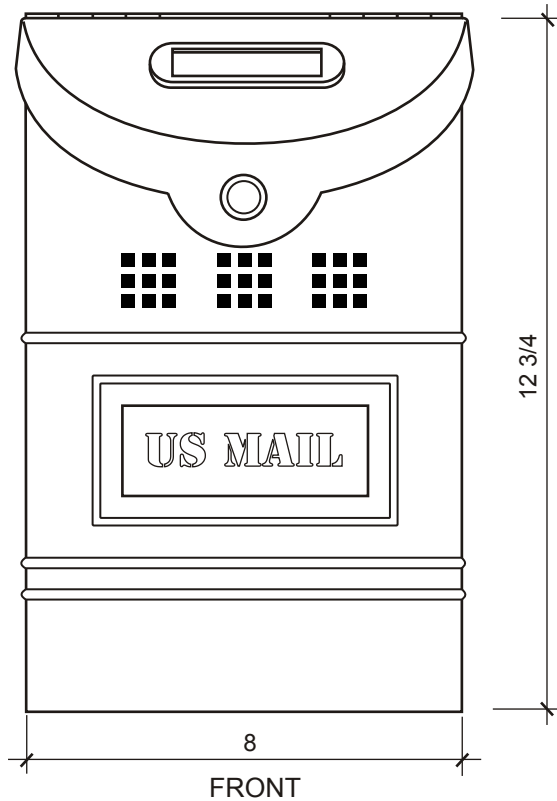


MODEL	MATERIAL	OVERALL SIZE	INSTALLATION	FINISHES	HARDWARE
E1	20 Gauge stainless steel or galvanized	8 1/4" W 12 3/4" H 3 1/2" D	Wall mounted	Satin or polished stainless steel, galvanized powder coated steel.	Mounting bar, screws and anchors included.

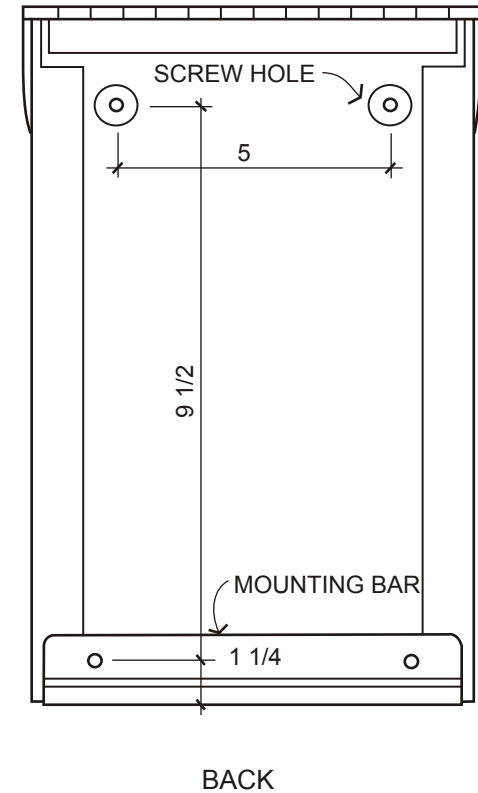

IMAGES NOT TO SCALE

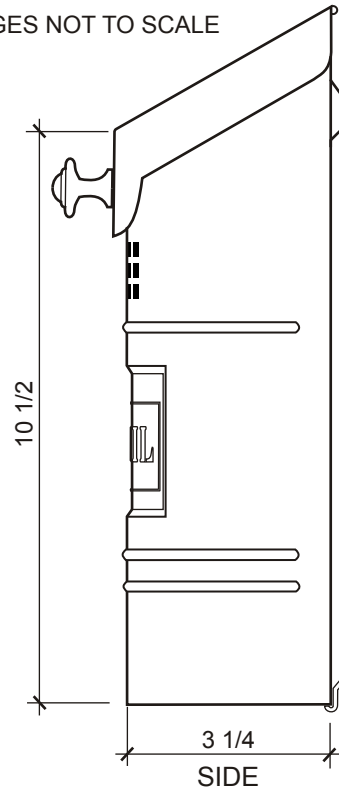

Maintenance

For the stainless steel model, clean with mild soap and water. In regions with high levels of salt content in the air, apply a coat of car wax after cleaning a couple of times a year.

Stainless steel does corrode in harsh environments but at a slower rate than regular steel. Frequent maintenance is recommended to prevent salt built up on the surface.

Installation Instructions

- 1 Remove knob from back panel and install on lid. Knob is located in one of the screw holes inside the mailbox. To insert a label into the nameplate holder, undo the dome nuts under lid, remove and peel off brown paper from clear acrylic window. Apply label and reinstall.
- 2 Determine the location and height of where the mailbox is to be installed. Attach the mounting bar first. Use plastic anchors when necessary.
- 3 Place the mailbox onto the lower bar engaging the lower corners of the mailbox and mark location of upper holes. Install upper screws.